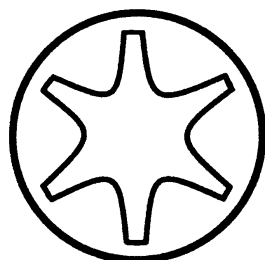
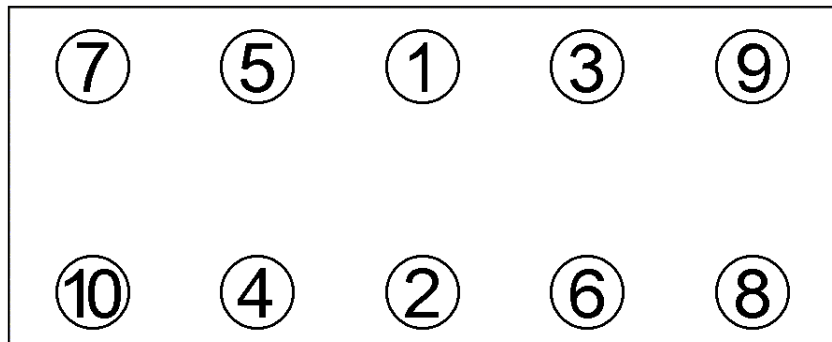


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****424.101**passend für / suitable for  
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

802.880

M 12x1,75x136

Anziehen/  
Tightening/  
Serrage/  
Apriete

- 10 Nm
- 100 Nm
- 3 min
- 180°
- 70 Nm
- 120°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

-/1,52 mm ÷

1,8 Ltr. Diesel, Mot.D18NA, 44 kW (60 PS)

Fiesta, Escort, Orion ab 07/1992&gt;

1,8 Ltr. Turbo-Diesel, Mot.D18T,D18TI

55/66 kW (75/90 PS)

Fiesta, Escort, Orion, Sierra ab 07/1992&gt;

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

**\*424.101\***