

# INFO



febi  
101339

SWAG  
10 10 1339

Blue Print  
ADU172307

to fit:  
Mercedes Benz C  
class 2013 >

## INSTALLATION INSTRUCTIONS

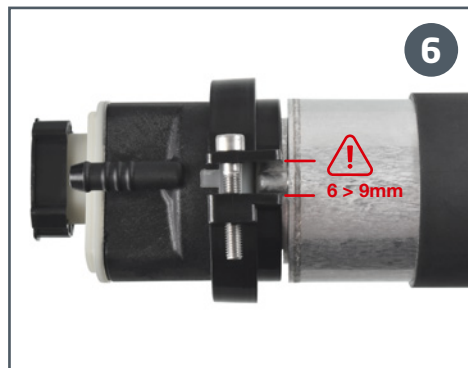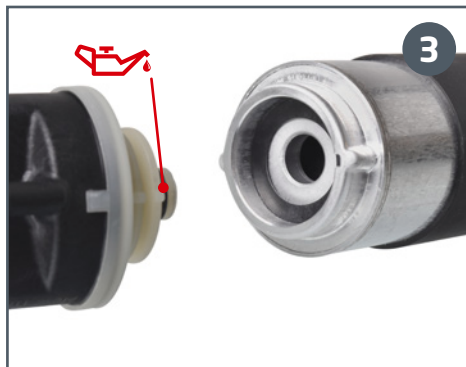

For more technical information please visit: [partsfinder.bilsteingroup.com](http://partsfinder.bilsteingroup.com)